



**G600AA, G600AB, G600AC, G600AD, G600AE, G600AI, G600AQ
G601AA, G601AB, G601AC, G601AD, G601AE, G601AF, G601AM**

6 / 9M LED Rope Light User Manual

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

PRODUCT SAFETY

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use in close proximity to gas appliances
- Do not use unless correctly installed.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not move the product whilst it is operating
- Do not use in bathrooms, wet rooms, saunas and other such locations.
- Do not cut or damage the plastic sheaf. This may damage the product and could result in a risk of electric shock or overheating.
- The product must be disconnected from the mains supply while installing or moving. The mains plug should also be removed from the supply.
- This product cannot be cut and reconnected.
- Do not cover this product while in use
- Do not use the product while it is roll up or in very close proximity to other rope lights, this may cause overheating and damage to the product.
- There are no user replaceable parts in this product
- Permanent Installation of this product must be carried out by a competent person.
- This product can only be used outside if installed by a qualified electrician.
- Stop using the product immediately if any of the LED's fail. The product should be disconnected from the mains supply.
- Do not allow the product to be installed in a position where it can be stepped on or suffer impact damage.

CONTENTS

Your box will contain 1 x 6m or 9m LED rope light.

OPERATION

Thank you for buying an Eagle LED Rope Light.


Unwind the product from the spool and lay it out carefully on the floor. Do not plug the product in.

Inspect the product for defects and flaws. If you detect any issues **DO NOT USE** the product and return it including the packing to the shop where you have bought it from.

Plug the product in and switch the mains power on. Check the product is fully working.

Switch the product off and take the plug out of the mains socket. Installation must not take place while the product is powered up.

The maximum achievable curve is 75mm diameter (see below).

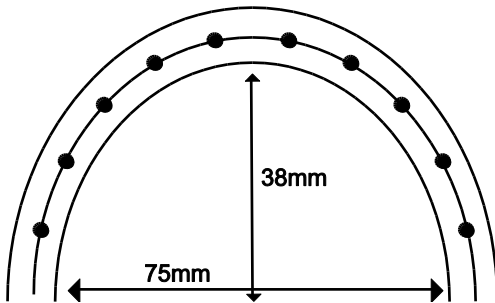

A curve of less than 75mm may stress the PVC sheath and lead to product damage and electrical failure.

The product **MUST NOT** be mounted using staples, nails or metal fixings. Cable ties can be used but must not be over tightened. This can cause strangulation of the product and may lead to electrical failure.

A range of mounting accessories are available from any Eagle stockist.

The plastic rope part of this product may be installed outside in covered areas away from direct contact with rain, moisture and sunlight and only by a suitably qualified installation engineer.


MAINTENANCE

There are no user serviceable parts in this product.

Periodically check the product for LED failure and damage. IF any of the LED's have failed or the product is damaged in anyway switch off and disconnect from the mains supply.

To clean the product switch off and disconnect from the mains supply. Using a slightly damp cloth gently wipe over. Do not use bleach, solvent based cleaners or strong detergents. These may damage the product and invalidate the warranty.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre.

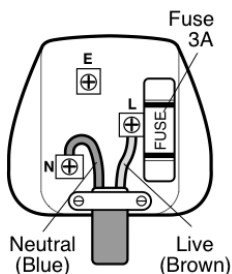

If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.
- If the plug is fitted with a 13 A or 5 A fuse, replace it by a 3 A fuse.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

PAT TESTING

When used in an office environment, we recommend that this product should be safety-tested yearly by a qualified electrician (PAT Tested).

We recommend that it is PAT tested regularly when used in a domestic environment.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

List of other available accessories (Not Supplied)

- G803AN  13mm Clip
- G803AQ  13mm Channel
- G803AS  13mm flexible channel
- G803AT  13mm reflective channel

TECHNICAL SPECIFICATION

Voltage.....	230 Vac ~
Fuse Rating	3A
Power Consumption.....	1.8W per m
Tube Diameter	13 mm
Number of LED's	36 per m
Weight	
9m	2kg
6m	1kg

SERVICE WARRANTY

Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

Our guarantee is administered by our retailers.

If your product arrives damaged, you must contact the retailer from whom you bought it.

The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement.

If your product fails within the guarantee period, firstly read the "fault finding" section of this manual, because temperature and weather conditions can affect the performance of certain products. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it.

The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.

If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816

If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Eagle is a Trademark of Electrovision Ltd.
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX
website: www.electrovision.co.uk