

## GPS80-1:1

### Ground Projector Screen

Item ref: 952.327UK


User Manual

Thank you for choosing this AV:Link ground projector screen. This freestanding unit can be quickly assembled by pulling the screen up and folding out the support feet. For storage and transportation the feet fold back in and the screen simply retracts back into the unit. An ideal solution for educational environments, business presentations and home cinema use.


#### Installation:

##### To open:


- Rotate stabilizing feet out from under the carry case

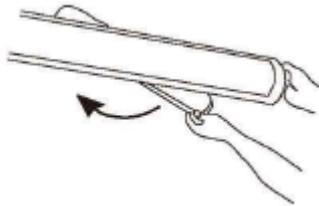

- Unlock to two clasps on the carry case and lift open the lid

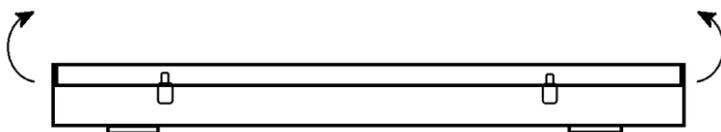


- Grasp the handle of the screen and pull gently upwards until the screen reaches the desired height. Release the handle; the screen will lock at that height.

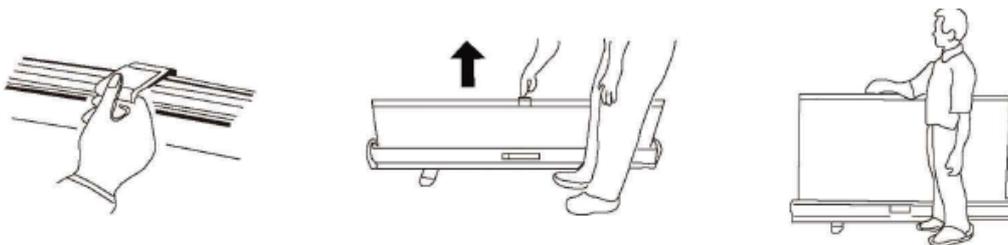


### To close:

- Grasp the top handle and gently lower and guide the screen back into the casing. Pay extra attention while doing this so to avoid injury from the back framework

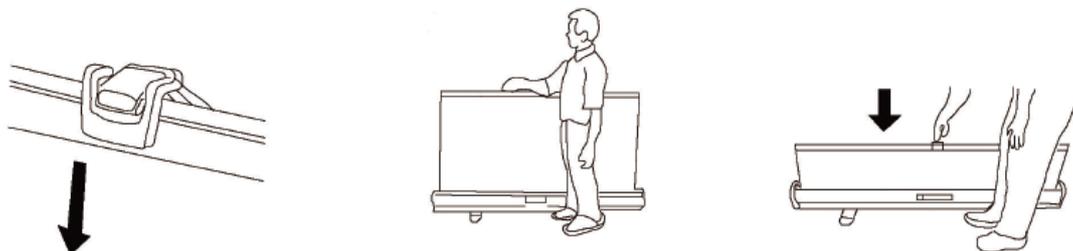

- After the screen is fully retracted into the case, close the lid and secure both clasps on the case. Finally, tuck the stabilizing feet under the case. The case is ready to store away

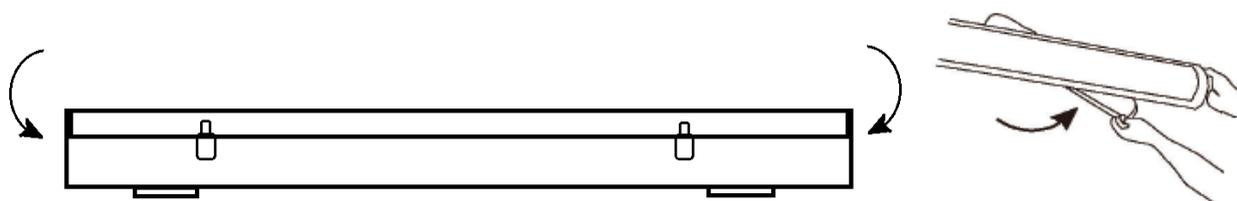

### Please note:

Ensure the unit is not placed near any excessive heat such as fireplace or a radiator.

Ensure unit is placed away from any walking path to avoid trip hazard.

### Maintenance:

Maintenance and service of the unit should not be required throughout the duty life of the product. We recommend dusting the unit on regular basis using a dry microfibre cloth. Use a slightly damp microfibre cloth to remove any stains with max 5% soap solution. Always ensure the surface is completely dry before closing the screen.