

LG 29 - Technical Information:

Max Load: 60kg
Max Height: 4 Metres
Min Height: 2.1 Metres
Base: 1.4 Metres
Weight: 33kg

User Guide:

- A. Take stand out of box.
- B. Place stand in a vertical position.
- C. Ensure the stand is positioned in a suitable location and on firm ground.
- D. Release the knob of the sliding collar, which holds the legs in vertical position against the mast and unlock the safety pin.
- E. Slide down the aluminium collar to give the legs the widest base possible, lock the knob and release the safety pin into the locked position.
- F. In case of uneven ground use the adjustable leg to maintain the most vertical position.
- G. Make sure there is no obstacle overhead when lifting the stand.
- H. Position and fix the load on top of the mast ensuring that it is centred and using a suitable adaptor.
- I. Tighten the lower knob and release the safety pin into a locked position.
- J. Loosen the upper knob and release the safety pin into an unlocked position.
- K. Lift the stand by turning the handle clockwise until the top pole is at the maximum height, then tighten the upper knob and release safety pin into the locked position.
- L. Loosen the lower knob and unlock the safety pin, then turn the handle until the rectangular pole is at maximum height and then tighten the lower knob and release the safety pin into a locked position.
- M. Always make sure the safety pin is released into the holes provided on the masts.

Assembly Guidelines:

- A. Ensure the stand is positioned on firm ground and clear of overhead obstructions.
- B. Ensure the loads are centred on the masts.
- C. Leave a safety radius when lifting and lowering.
- D. Always ensure the top of stand is secured when using it outdoors.
- E. Make sure all the safety mechanisms are locked in place i.e safety pins and knobs.
- F. Do not move stand when loaded or in upright position

Servicing Equipment:

- A. Equipment must be serviced by skilled staff.
- B. The stand should be inspected for damaged parts before every use.
(e.g pulleys, cables etc.)
- C. The equipment must be inspected annually by an authorised technician.

Safety:

- A. Loading onto the stand should conform to the specifications.
- B. Load must be vertically centred and evenly distributed on stand.
- C. Never move stand when loaded.
- D. Never place a ladder against the stand.
- E. Never use the stand to carry people.
- F. Safety chains must be used on projectors.
- G. Always secure the top of the stand, with rope or cable when using outdoors
- H. It is not recommended to use objects offering resistance to wind when using this as a stand or a trussing bridge.
- I. Knobs, cable winch, pulley, telescopic masts and safety parts must be inspected before each use.
- J. Any damages must be repaired immediately.
- K. In order to maintain the guarantee of function and safety original parts from the manufacturer must be used.
- L. Everything you do must be guided by the notion of maximum safety.