

CH5 = 000...255 Dimmer GREEN (segment 2)
CH6 = 000....255 Dimmer BLUE (segment 2)

This mode needs to be chosen if the unit is supposed to work as a 2-segment slave device to other 2-segment devices which act as the master. Note that if the master itself is a 1-segment, the "dC3" mode needs to be chosen. For any such kind of slave operation, the DMX channel has to be set to 001.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to "d_6" mode.

"d_8" Mode (DMX 8CH Mode)

Press the MODE button on until the display shows "d_8", indicating operation in "d_8" (DMX 8-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the "d". This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the "d" in the display indicates that a DMX signal is present. Once in "d" Mode, the IR remote control is disabled.

The unit receives DMX values on a packet of 8 consecutive DMX channels, with the following functional assignment:

CH1 = 000...255 Dimmer RED (segment 1)
CH2 = 000...255 Dimmer GREEN (segment 1)
CH3 = 000....255 Dimmer BLUE (segment 1)
CH4 = Master Dimmer / Strobe (segment 1)
000...127 Master Dimmer 0...100%
128...227 Strobe speed (128=slow / 227=max. speed 23 Hz)
228...255 Master Dimmer = 100% Strobe off
CH5 = 000...255 Dimmer RED (segment 2)
CH6 = 000...255 Dimmer GREEN (segment 2)
CH7 = 000....255 Dimmer BLUE (segment 2)
CH8 = Master Dimmer / Strobe (segment 2)
000...127 Master Dimmer 0...100%
128...227 Strobe speed (128=slow / 227=max. speed 23 Hz)
228...255 Master Dimmer = 100% Strobe off

This mode needs to be chosen if the unit is supposed to work as a 2-segment device controlled by an external DMX controller with combined dimmer/strobe channel.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to "d_8" mode.

USER MANUAL

VersoLine-HT3012

DMX-controlled RGB 2-Segment LED Batten

For firmware 50-015-0038-00200-1-00 Firmware RevA (MF 2SEG-S2L)

ENGLISH Page 2-19



■ Introduction

Dear customer,

congratulations on the purchase of this quality item and the trust having been put in us with this decision. To take full advantage of all possibilities and for your own safety and the safety of your environment, please read these operating instructions carefully before you start using the unit.

SAFETY INFORMATION



Read the safety precautions in this chapter before installing, powering up, operating or servicing this device. Failure to do so may void the product warranty, and releases the manufacturer from all product liability.

■ Symbols used in this manual

The following symbols are used to identify important safety information on the product and in this manual:



WARNING! Read manual before installation, operation or servicing.



WARNING! Safety hazard. Risk of injury or death.



WARNING! Hazardous voltage. Risk of severe or fatal electric shock.



WARNING! Shock hazard. Equipment must be properly grounded.



WARNING! Hot surface. Risk of skin burn or skin irritation.



WARNING! Fire hazard.



WARNING! Laser radiation. Risk of surface damage.



WARNING! LED light emission. Risk of eye injury.

“dC5” Mode (DMX Combined 5CH Mode)

Press the MODE button on until the display shows “dC5”, indicating operation in “dC5” (DMX Combined 5-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the “d”. This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the “d” in the display indicates that a DMX signal is present. In any “d” Mode, the IR remote control is disabled.

The unit receives DMX values on a packet of 5 consecutive DMX channels, with the following functional assignment:

CH1 =	000...255	Dimmer RED	(both segments)
CH2 =	000...255	Dimmer GREEN	(both segments)
CH3 =	000...255	Dimmer BLUE	(both segments)
CH4 =	000...255	Master Dimmer 0...100%	(both segments)
CH5 =		Strobe	(both segments)
	000...049	Strobe off	
	050...255	Strobe rate (050=slow / 255=max. speed 23 Hz)	

This mode needs to be chosen if the unit is supposed to work as a single-segment device controlled by an external DMX controller with separate dimmer/strobe channels.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to “dC5” mode.

“d 6” Mode (DMX 6CH Mode)

Press the MODE button on until the display shows “d_6”, indicating operation in “d_6” (DMX 6-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the “d”. This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the “d” in the display indicates that a DMX signal is present. In any “d” Mode, the IR remote control is disabled.

The unit receives DMX values on a packet of 6 consecutive DMX channels, with the following functional assignment:

CH1 =	000...255	Dimmer RED	(segment 1)
CH2 =	000...255	Dimmer GREEN	(segment 1)
CH3 =	000...255	Dimmer BLUE	(segment 1)
CH4 =	000...255	Dimmer RED	(segment 2)

The unit receives DMX values on a packet of 3 consecutive DMX channels, with the following functional assignment:

CH1 = 000...255	Dimmer RED	(both segments)
CH2 = 000...255	Dimmer GREEN	(both segments)
CH3 = 000...255	Dimmer BLUE	(both segments)

This mode needs to be chosen if the unit is supposed to work as a single-segment slave device to other 1-segment devices which act as the master. Note that if the master itself is a 2-segment device (like if the master is the same unit as this unit), the "d6" mode needs to be chosen. For any such kind of slave operation, the DMX channel has to be set to 001.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to "dC3" mode.

"dC4" Mode (DMX Combined 4CH Mode)

Press the MODE button on until the display shows "dC4", indicating operation in "dC4" (DMX Combined 4-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the "d". This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the "d" in the display indicates that a DMX signal is present. In any "d" Mode, the IR remote control is disabled.

The unit receives DMX values on a packet of 4 consecutive DMX channels, with the following functional assignment:

CH1 = 000...255	Dimmer RED	(both segments)
CH2 = 000...255	Dimmer GREEN	(both segments)
CH3 = 000...255	Dimmer BLUE	(both segments)
CH4 = 000...255	Master Dimmer / Strobe	(both segments)
000...127	Master Dimmer 0...100%	
128...227	Strobe speed (128=slow / 227=max. speed 23 Hz)	
228...255	Master Dimmer = 100% Strobe off	

This mode needs to be chosen if the unit is supposed to work as a single-segment device controlled by an external DMX controller with combined dimmer/strobe channel.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to "dC4" mode.

■ Security advice before use



General advice:

1. Read this manual completely before using the product.
2. Keep this manual in your records for future reference.
3. Follow all instruction printed in this manual.
4. Follow all printed security advice on the product itself.
5. Take care of enough distance between this product and sources of hum and noise like electric motors and transformers.
6. Carry this product with greatest care. Punches, big forces and heavy vibration may damage this product mechanically.



Protection from eye injury

1. Warning: Depending on the configuration of the device, this device may reach or exceed the limits of EN62471, risk group 1, and may hence reach to risk group 2.
2. To avoid eye injury, do not look into the beam from a distance of less than 8.5 m (27 ft. 11 ins) from the front surface of the fixture without protective eyewear such as shade-5 welding goggles. At larger distances, light output is harmless to the naked eye provided that the eye's natural aversion response is not affected.
3. Do not view the beam directly with optical instruments such as magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.
4. Ensure that during setup and DMX programming, no persons are inside a 8.50m (27 ft. 11 ins) vicinity of the device's front surface, to avoid that they may accidentally be exposed to the light beam.



Protection from electric shock:

1. Only connect this unit to a mains socket outlet with protective earth connection, ground-fault (earth-fault) and overload protection.
2. Where the mains plug or an appliance coupler is used as a disconnect device, such device shall remain readily operable.
3. To pull the AC Cord out of the wall outlet or the unit's AC socket, never pull the cable itself, but only the AC plug.
4. Disconnect the unit from AC supply before any kind of cleaning on the product. Use smooth and dry cloth only for cleaning.
5. Do not expose this unit to any dripping or splashing liquids, and do not place objects filled with liquids, such as vases, on the unit.
6. Do not operate this unit near to open water or in high humidity.
7. Choose the position of the AC cord according to the lowest risk of damage by foot steps or by squeezing it.
8. Do not open the unit for service, there are no user-serviceable parts inside. Warranty will be void in any case of unauthorized service by the user or other not authorized persons.

**Protection from fire:**

1. Take care of not placing the unit near sources of heat (e.g. powerful amplifiers, fog machines).
2. Allow at least about 0.15m (6 ins.) between this unit and other devices or a wall to allow for proper cooling.
3. Take always care of sufficient air convection in the unit's environment to avoid overheating. Make sure air convection slots are not blocked. Do not operate this unit in environmental temperatures exceeding 35 degrees Celsius.
4. Be sure this fixture is kept at least 0.75m (30ins.) away from any flammable materials (decoration etc.).
5. Do not stick filters, masks or other materials directly on the LEDs or the LED cover screen.
6. Check the total maximum power of your AC wall outlet if you connect several units to one wall outlet and avoid any overloading.
7. If the device itself has an AC outlet for providing power to other units, make sure to not exceed the specified maximum load.

**Protection from injury and damage:**

1. Never use any accessories or modifications not authorized by the manufacturer of this unit.
2. Choose a location for operation where the unit is protected from vibration and where a fixed mounting position is provided. In case of overhead-mounting, follow applicable rigging requirements.
3. Before plugging the AC cord in the wall outlet, check whether the AC plug, the mains voltage and frequency are the same as this product is specified for. If not, contact your dealer immediately.
4. The surface of the device may get hot during operation, and heat sink areas may reach to or exceed the limits of EN60950. Do not touch heat sink areas of the device during operation, and allow 20 minutes of cool-down time after powering off before touching.
5. If fluids have spilled into the unit or small parts have intruded the unit, immediately switch off the unit and hand it over to the authorized service for a security check.
6. Disconnect the unit from AC supply by pulling the AC plug out of the wall outlet or the unit's AC socket during a thunder-storm in order to avoid any damage on the unit due to AC voltage peaks.
7. In case of not correct function of this unit or damaged AC cord or other damaged parts, pull immediately the AC plug out of the wall outlet and hand the unit over to the authorized service for a security check.
8. To meet all aspects of functionality and security during maintenance work to be performed on this unit, all parts should be replaced by genuine spare parts. Consequently, take care of your dealer or maintenance company to be authorized by the manufacturer.

In "S" mode, the unit does not receive any values from the DMX input but generates related DMX values on the output (6CH) according to the selected pattern, so that further units can show the same behaviour if they are connected by DMX signal cables and set to d3 Mode with selected start address = 001. If you leave mode "SLx" for any reason and come back later into mode "SLx", the unit will recall the last chosen preset (even if the unit was switched off in between). Available pattern presets:

Pres	Type	Step 1	Step 2	Step 3	Step 4	Step 5	Step 6	Trans.
S 0	1CB	red red	green green	blue blue				Fade
S 1	1CB	yellow yellow	turquoise turquoise	pink pink				Fade
S 2	2CS	green blue	blue green					Fade
S 3	2CS	red blue	blue red					Fade
S 4	2CS	orange green	green orange					Fade
S 5	2CS	pink blue	blue pink					Fade
S 6	3CC	red green	green blue	blue red				Fade
S 7	3CC	yellow turquoise	turquoise pink	pink yellow				Fade
S 8	3CB	red off	off green	blue off	off red	green off	off blue	Fade
S 9	3CB	yellow off	off turquoise	pink off	off yellow	turquoise off	off pink	Fade
S10	1CB	red red	green green	blue blue				Switch
S11	1CB	yellow yellow	turquoise turquoise	pink pink				Switch
S12	2CS	green blue	blue green					Switch
S13	2CS	red blue	blue red					Switch
S14	2CS	orange green	green orange					Switch
S15	2CS	pink blue	blue pink					Switch
S16	3CC	red green	green blue	blue red				Switch
S17	3CC	yellow turquoise	turquoise pink	pink yellow				Switch
S18	3CB	red off	off green	blue off	off red	green off	off blue	Switch
S19	3CB	yellow off	off turquoise	pink off	off yellow	turquoise off	off pink	Switch

Pattern types:

1CB = 1C Burst: both panels on with same color, color changes.

2CS = 2C Swap: Both panels on with different color, color swaps between them.

3CC = 3C Chase: Both panels on with different color, color sequence runs through them.

3CB = 3C Blink: One panel on, alternates with other panel, color changes.

* Note: Patterns Sx0-Sx9 are identical to the patterns used in A mode.

**NOTE: The IR remote is only active when the unit is in C, A and S mode. If you intend to control the unit by IR remote, make sure by relative setting on the unit itself that the unit is NOT in "d" mode.

"dC3" Mode (DMX Combined 3CH Mode)

Press the MODE button on until the display shows "dC3", indicating operation in "dC3" (DMX Combined 3-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the "d". This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the "d" in the display indicates that a DMX signal is present. In any "d" Mode, the IR remote control is disabled.

****NOTE:** The IR remote is only active when the unit is in C, A and S mode. If you intend to control the unit by IR remote, make sure by relative setting on the unit itself that the unit is NOT in “d” mode.

“S” Sound-to-Light Mode

Press the MODE button on the unit itself until the first digit on the display shows “Sxx”, indicating operation in “S” mode with chosen pattern “xx”; then choose by using the UP/DOWN buttons one of the 20 pattern presets as shown in the list below. For units fitted with the optional IR remote control, press the SOUND button on the IR remote respectively; then choose by the FADE/SWITCH button on the IR remote which type of pattern preset you intend to access. Having chosen FADE, the first ten pattern presets (0...9) are available via IR remote by pressing the number keys 0...9 on the IR remote accordingly; having chosen SWITCH, the second ten pattern presets (10...19) are available via IR remote by pressing the number keys 0...9 on the IR remote accordingly.

In S (Sound-to-Light) mode, the speed of the pattern progress is determined by the signal picked up by the internal microphone. Every detected beat will

- Temporarily speed up the color fade in pattern presets 0....9, creating a “pulsating” effect in synchronization with the music.
- Switch to the next pattern step in pattern presets 10....19, creating a “chasing” effect in synchronization with the music.

The output level (brightness) can be set in 10 levels: 10% | 20% | 30% | 40% | 50% | 60% | 70% | 80% | 90% | 100%. To do this with the on-board user interface, the user must change into COLOR mode first and make a global brightness adjustment as described in the COLOR mode chapter. For units fitted with the optional IR remote control, the brightness can also be set directly using the LEVEL UP/DOWN buttons on the IR remote.

If the unit is controlled by the optional IR remote control, further parameters apply as follows:

- When activating the STROBE function (Strobe RED/GREEN/BLUE/WHITE buttons) on the IR remote control from within the S (Sound-to-Light) Mode, the unit will return to the S (Sound-to-Light) Mode in previously chosen pattern preset upon pressing the STROBE function on the IR remote again. Note that the strobe speed is fixed at 16Hz and cannot be changed. Also note that the strobe function always applies to both panels with the same color.
- Once Blackout is activated by the IR remote control, the previous operation mode is stored and recalled once Blackout is cleared by pressing the relative button on the IR remote again.
- The IR remote is only active when the unit is in C, A and S modes. If you intend to control the unit by IR remote, make sure by relative setting on the unit itself that the unit is NOT in “dC3/dC4/dC5/d6/d8/d10/dP” mode.

■ Health advice

This unit produces and absorbs electromagnetic radiation. The strength of radiation and the sensitivity for disturbing interference matches the CE and FCC requirements. A corresponding sign is printed on the backside of the unit. Any change or modification may affect the behavior of the unit concerning electromagnetic radiation, with the CE requirements eventually not to be met any more. The manufacturer takes no responsibility in this case.

■ Functional advice

This unit is immune to the presence of electromagnetic disturbances – both conducted and radiated - up to a certain level. Under peak conditions, the unit is classified to show a “class C” performance criteria and may encounter temporary degradation or loss of function which may need manual help to recover. In such case, disconnect the AC power from the unit and reconnect it again to recover.

■ Environmental advice



This unit is built to conform to the ROHS standards and the WEEE directive 2002/96/EC of the European Parliament and of the Council of the European Union. Under these regulations, the product shall not be discarded into regular garbage at the end of its life, but shall be returned to authorized recycling stations.

■ LED Lifetime advice

LED lifetime is determined by the gradually declining brightness of a LED over time, with a point of 50% brightness reduction marking the defined end of its lifetime. The driving factor of this effect is the heat that the chip inside the LED is exposed to. While a chip may under ideal circumstances reach to more than 100000 hours of lifetime, the real-world lifetime may only be 30000 to 50000 hours or less if the LED is exposed to excessive heat, which can be caused by continuously running all LEDs inside this device at full power and operating the unit in high environmental temperatures. If improving the lifespan expectancy is a priority, take care of providing for lower operational temperatures. This may include forced external cooling and/or the reduction of overall projection intensity.

■ Unpacking

Please check that the box contains the following items, and contact your dealer immediately for replacement if any part is missing:

Main parts:	1 pc. VersoLine-HT3012 main unit
	1 pc. mains cable
	1 pc. operation manual

■ Getting started: choosing a location



Risk of fire: The VersoLine-HT3012 has been designed to work in dry indoor environments at environmental temperatures up to 35 degrees Celsius. For proper operation, the unit must be operated with unobstructed air convection to its outside metal case.

Do not:

- Operate the VersoLine-HT3012 in environments with more than 35 degrees environmental temperature or more than 75% relative humidity.
- Operate the VersoLine-HT3012 in any closed environment smaller than 10cbm, unless forced air convection is provided.

■ Getting started: secure mounting

The VersoLine-HT3012 can be mounted in various ways:

Floor standing operation

- Turn the brackets to the lower side of the unit.
- Place the unit in a secure position where it can neither be touched by anyone or could possibly become an objective for anyone to stumble.
- Make sure to comply with cooling requirements of the used power supply if any.

Hanging/Rigging, ceiling-mounted operation



Risk of injury: Overhead mounting requires extensive experience, including among others calculating working load limits, good knowledge of the installation material being used, and periodic safety inspection of all installation material and the unit. If you lack such qualifications, do not attempt the installation yourself. Improper installation can result in body injury. Be sure to complete all rigging and installation procedures before applying power to the unit.

- The unit should be installed out of reach of people and outside areas where persons may walk by or be seated.
- Make sure that the installation area can hold a minimum point load of 10 times the device's weight.
- In fixed installations, fix the unit with self-locking screws/nuts to the mounting point.
- When mounting the unit to truss be sure to secure an appropriately rated clamp to the mounting brackets.
- Where required, secure the installation with an appropriate safety cable. Always use a certified safety cable according to EN60598-2-17 Section 17.6.6 that can hold 12 times the weight of the device when installing the unit. This secondary safety attachment should be installed in a way that no part of the installation can drop more than 20cm if the main attachment fails.

pattern preset upon pressing the STROBE function on the IR remote again. Note that the strobe speed is fixed at 16Hz and can not be changed. Also note that the strobe function always applies to both panels with the same color.

- Once Blackout is activated by the IR remote control, the previous operation mode is stored and recalled once Blackout is cleared by pressing the relative button on the IR remote again.
- The IR remote is only active when the unit is in C, A and S modes. If you intend to control the unit by IR remote, make sure by relative setting on the unit itself that the unit is NOT in "dC3/dC4/dC5/d6/d8/d10/dP" mode.

In "Axx" mode, the unit does not receive any values from the DMX input but generates related DMX values on the output (6CH) according to the selected pattern, so that further units can show the same behaviour if they are connected by DMX signal cables and set to DMX mode "d_6" with starting channel = 001. If you leave mode "Axx" for any reason and come back later into mode "Axx", the unit will recall the last chosen pattern (even if the unit was switched off in between). Available pattern presets:

Pres	Type	Step 1	Step 2	Step 3	Step 4	Step 5	Step 6	Trans.
A 0	1CB	red red	green green	blue blue				Fade
A 1	1CB	yellow yellow	turquoise turquoise	pink pink				Fade
A 2	2CS	green blue	blue green					Fade
A 3	2CS	red blue	blue red					Fade
A 4	2CS	orange green	green orange					Fade
A 5	2CS	pink blue	blue pink					Fade
A 6	3CC	red green	green blue	blue red				Fade
A 7	3CC	yellow turquoise	turquoise pink	pink yellow				Fade
A 8	3CB	red off	off green	blue off	off red	green off	off blue	Fade
A 9	3CB	yellow off	off turquoise	pink off	off yellow	turquoise off	off pink	Fade
A10	1CB	red red	green green	blue blue				Switch
A11	1CB	yellow yellow	turquoise turquoise	pink pink				Switch
A12	2CS	green blue	blue green					Switch
A13	2CS	red blue	blue red					Switch
A14	2CS	orange green	green orange					Switch
A15	2CS	pink blue	blue pink					Switch
A16	3CC	red green	green blue	blue red				Switch
A17	3CC	yellow turquoise	turquoise pink	pink yellow				Switch
A18	3CB	red off	off green	blue off	off red	green off	off blue	Switch
A19	3CB	yellow off	off turquoise	pink off	off yellow	turquoise off	off pink	Switch
A20	STR	white white						Strobe
A22	STR	red red						Strobe
A23	STR	green green						Strobe
A24	STR	blue blue						Strobe

Pattern types:

1CB = 1C Burst: both panels on with same color, color changes.

2CS = 2C Swap: Both panels on with different color, color swaps between them.

3CC = 3C Chase: Both panels on with different color, color sequence runs through them.

3CB = 3C Blink: One panel on, alternates with other panel, color changes.

* Note: Patterns Ax0-Ax9 are identical to the patterns used in S mode.

Blue (B)	0	0	255
Yellow (Y)	255	170	0
Pink (P)	255	0	255
Turquoise (T)	0	255	255
Lime (L)	127	255	0
Orange (O)	255	85	0
Marine (M)	0	127	255
Frog (F)	0	255	127
Lavender (V)	127	0	255
Candy (C)	255	0	127
Blackout	0	0	0

“A” Auto Mode

Press the MODE button on the unit itself until the first digit on the display shows “Axx”, indicating operation in “A” mode with chosen pattern “xx”; then choose by using the UP/DOWN buttons one of the 24 pattern presets as shown in the list below. For units fitted with the optional IR remote control, press the AUTO button on the IR remote respectively; then choose by the FADE/SWITCH button on the IR remote which type of pattern preset you intend to access. Having chosen FADE, the first ten pattern presets (0...9) are available via IR remote by pressing the number keys 0...9 on the IR remote accordingly; having chosen SWITCH, the second ten pattern presets (10...19) are available via IR remote by pressing the number keys 0...9 on the IR remote accordingly. The strobe patterns (20...23) are directly accessible via IR remote using the Strobe RED/GREEN/BLUE/WHITE buttons.

The speed of the pattern progress can be set in 10 levels: 3 BPM (0.05Hz) | 6 BPM (0.1Hz) | 30 BPM (0.5Hz) | 60 BPM (1.0Hz) | 90 BPM (1.5Hz) | 120 BPM (2.0Hz) | 150 BPM (2.5 Hz) | 200 BPM (3.2Hz) | 320 BPM (5.2Hz) | 480 BPM (8.0Hz). This is done by pressing and holding the MODE button and then pressing the UP or DOWN buttons to change the speed. The current speed is displayed (SP0....SP9) while making the adjustment. Note that the speed setting using the on-board user interface can only be done in AUTO mode. For units fitted with the optional IR remote control, the speed can also be set using the SPEED UP/DOWN buttons. The controls on the unit itself and on the IR remote supersede each other with the last command given having validity.

The output level (brightness) can be set in 10 levels: 10% | 20% | 30% | 40% | 50% | 60% | 70% | 80% | 90% | 100%. To do this with the on-board user interface, the user must change into COLOR mode first and make a global brightness adjustments as described in the COLOR mode chapter. For units fitted with the optional IR remote control, the brightness can also be set directly using the LEVEL UP/DOWN buttons on the IR remote.

If the unit is controlled by the optional IR remote control, further parameters apply as follows:

- When activating the STROBE function (Strobe RED/GREEN/BLUE/WHITE buttons) on the IR remote control, the unit will return to previously chosen

- Never stand directly below the device when mounting, removing, or servicing the fixture. Make sure the area below the installation place is free from unwanted persons during rigging, de-rigging and servicing.
- The operator has to make sure that the safety-relating and machine-technical installations are approved by an expert before using them for the first time. The installations should be re-inspected every year.
- Make sure to comply with applicable cooling requirements if any.

■ Getting started: making AC supply connections




Risk of fire / Safety risk

The VersoLine-HT3012 requires an AC power source with sufficient power carriage and correct grounding to ensure safe operation. The AC power source must be equipped with a circuit breaker and earth leakage detector. Make sure to only use compliant AC supply lines.


The VersoLine-HT3012 has an AC outlet that is designed to carry loads of no more than 8A. Make sure that all connected devices in a chain fed by the first device do not exceed a maximum of 8A current consumption.

■ Getting started: making DMX control connections

Connect the VersoLine-HT3012 to a suitable DMX controller where needed, and interconnect several units by means of their DMX In/Outputs as required. The last unit shall be equipped with a proper 120 Ohm termination resistor equipped DMX-plug as shown in below drawing. Please make sure that all used DMX cables comply to below standard:

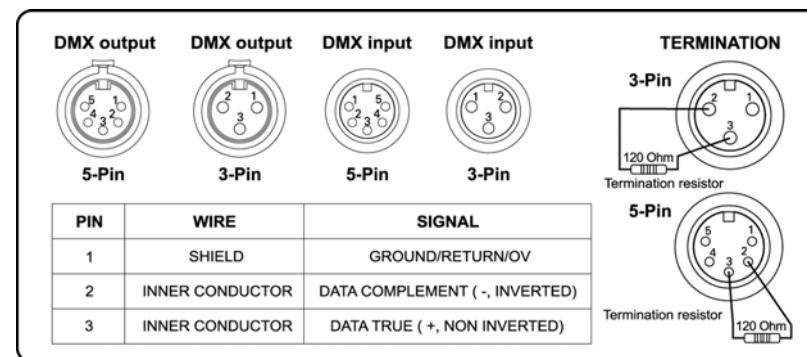

■ Operation

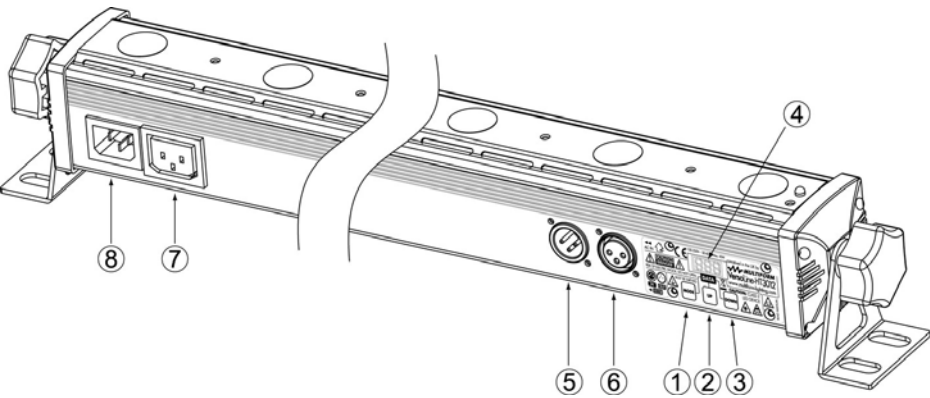

User interface overview:

- 1 MODE selection button
- 2 UP-Button
- 3 DOWN-Button
- 4 Display showing the Mode, DMX-address, etc.
- 5 DMX input
- 6 DMX output
- 7 AC output
- 8 AC input

Upon the user’s choice, the unit can work in stand-alone automatic modes, or with fixed colors, or it may be controlled by external DMX-controllers. Available modes:

“C” Color Mode

Press the MODE button until the first digit on the display shows “Cxx”, indicating operation in “C” mode with chosen preset “xx”, then choose by using the UP/DOWN buttons one of the 20 color presets as shown in the list below. For units fitted with the optional IR remote control, press the COLOR button on the IR remote respectively; the first ten color presets (0...9) are available via IR remote by pressing the number keys 0...9 on the IR remote accordingly.

The output level (brightness) can be set in 10 levels: 10% | 20% | 30% | 40% | 50% | 60% | 70% | 80% | 90% | 100%. This is done by pressing and holding the MODE button and then pressing the UP or DOWN buttons to change the brightness. The current level is displayed (L01....L10) while making the adjustment. Note that the brightness setting using the on-board user interface can only be done in COLOR mode and is a global

setting for all stand-alone modes, which means that the same chosen brightness remains applicable for the AUTO mode as well. The brightness chosen on the unit itself however has no influence in any of the DMX modes. For units fitted with the optional IR remote control, the brightness can also be set using the LEVEL UP/DOWN buttons. The controls on the unit itself and on the IR remote supersede each other with the last command given having validity.

If the unit is controlled by the optional IR remote control, further parameters apply as follows:

- When activating the STROBE function (Strobe RED/GREEN/BLUE/WHITE buttons) on the IR remote control from within the C (COLOR) Mode, the unit will return to the C (COLOR) Mode in previously chosen Color preset upon pressing the STROBE function on the IR remote again. Note that the strobe speed is faxed at 16Hz and can not be changed. Also note that the strobe function always applies to both panels with the same color.
- Once Blackout is activated by the IR remote control, the previous operation mode is stored and recalled once Blackout is cleared by pressing the relative button on the IR remote again.
- The IR remote is only active when the unit is in C, A and S modes. If you intend to control the unit by IR remote, make sure by relative setting on the unit itself that the unit is NOT in “dC3/dC4/dC5/d6/d8/d10/dP” mode.

In “C” mode, the unit does not receive any values from the DMX input but generates related DMX values on the output (6CH) according to the selected preset, so that further units can show the same behaviour if they are connected by DMX signal cables and set to DMX mode “d_6” with starting channel = 001. If you leave mode “C” for any reason and come back later into mode “C”, the unit will recall the last chosen color preset (even if the unit was switched off in between). Available color presets:

Unit	Color	IR Remote	Unit	Color	IR Remote
C00	White (W)	0	C10	Yellow (Y)	n/a
C01	Red (R)	1	C11	Turquoise (T)	n/a
C02	Green (G)	2	C12	Lime (L)	n/a
C03	Blue (B)	3	C13	Marine (M)	n/a
C04	Orange (O)	4	C14	Frog (F)	n/a
C05	Pink (P)	5	C15	Lavender (V)	n/a
C06	Green-Blue (GB)	6	C16	Candy (C)	n/a
C07	Red-Blue (RB)	7	C17	Turquoise Lime (TL)	n/a
C08	Orange-Green (OG)	8	C18	Lavender Candy (LC)	n/a
C09	Pink-Blue (PB)	9	C19	White-Red (WR)	n/a
			C20	OFF	Blackout

Color Definitions (in DMX values) as below:

Colour	R	G	B
White (W)	0	0	0
Red (R)	255	0	0
Green (G)	0	255	0

LEVEL UP/DOWN Keys – allow to set the dimming level of the unit in ten different steps. Since this control is not available on the on-board user interface of the main unit, the setting will get lost when switching the modes between COLOR and AUTO.

SPEED UP/DOWN Keys - allow to set the execution speed of the AUTO mode in ten different steps. Since this control is not available on the on-board user interface of the main unit, the setting will get lost when switching the between modes.

■ Technical data VersoLine-HT3012

LEDs.....	12xRGB 3-in-1 MultiLED lin 2 segments
Dispersion angle.....	Secondary, 25°
Mains Input.....	AC90-250V~ 50/60Hz
Power supply type.....	switch mode
Power Consumption.....	max. 41W
Fuse.....	internal (see service manual)
DMX connections.....	3 pin XLR (Male / Female)
Modulation Type.....	Pulse Width Modulation (PWM)
Control protocol.....	DMX 512 (1990)
Dimensions (without brackets).....	L1064.00 x H64.00 x D66.00 mm
Weight	2.44kg

■ Standards

This product complies with the following standards:

EU electrical safety.....	EN60598-1:2008, EN60598-2-1:1989
EU photobiological safety.....	EN 62471:2008
EU EMC.....	EN55015: 2006 + A1:2007, EN61547:1995 + A1:2000
EU Harmonics	EN61000-3-2:2006
EU Flicker	EN61000-3-3:2008
US safety	UL60065
US EMC.....	FCC Part 15

This product meets both the EMC Directive 2004/108/EC and the Low Voltage Directive 2006/95/EC.

“d10” Mode (DMX 10CH Mode)

Press the MODE button on until the display shows “d10”, indicating operation in “d10” (DMX 10-channel) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the “d”. This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the “d” in the display indicates that a DMX signal is present. Once in “d” Mode, the IR remote control is disabled.

The unit receives DMX values on a packet of 10 consecutive DMX channels, with the following functional assignment:

CH1 =	000...255	Dimmer RED	(segment 1)
CH2 =	000...255	Dimmer GREEN	(segment 1)
CH3 =	000...255	Dimmer BLUE	(segment 1)
CH4 =	000...255	Master Dimmer 0...100%	(segment 1)
CH5 =		Strobe	(segment 1)
	000...049	Strobe off	
	050...255	Strobe rate (050=slow / 255=max. speed 23 Hz)	
CH6 =	000...255	Dimmer RED	(segment 2)
CH7 =	000...255	Dimmer GREEN	(segment 2)
CH8 =	000...255	Dimmer BLUE	(segment 2)
CH9 =	000...255	Master Dimmer 0...100%	(segment 2)
CH10 =		Strobe	(segment 2)
	000...049	Strobe off	
	050...255	Strobe rate (050=slow / 255=max. speed 23 Hz)	

This mode needs to be chosen if the unit is supposed to work as a 2-segment device controlled by an external DMX controller with separate dimmer/strobe channels.

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to “d10” mode.

“dP” Mode (DMX Preset Mode)

Press the MODE button on the unit itself until the display shows “dP”, indicating operation in “dP” (DMX Preset) mode. Shortly after that, the display shows the DMX starting address. You can choose any DMX starting address by simply using the UP/DOWN buttons on the unit itself. The chosen DMX-address comes effective approximately 3 seconds later and will show up on the display on the unit itself in alternation to the “d”. This allows control of the unit by any external DMX signal sending on the chosen channels. Once such signal is received, a LED on the lower right side of the “d” in the display indicates that a DMX signal is present.

The unit receives DMX values on a packet of 4 consecutive DMX channels, with the following functional assignment:

CH1 = Choice of fixed colors (if CH3 < 25) or fade/switch pattern presets (if CH ≥ 25)
 CH2 = 000...255 Master Dimmer 0...100%
 CH3 = Function choice C (Color – static) and A (Auto) mode, speed setting for A mode.
 CH3 0.....24 selects the fixed color (C) mode. Color choice by CH1.
 CH3 25.....234 selects the auto (A) mode and determines the speed.
 Pattern choice by CH1.
 CH3 235...255 selects the sound-to-light (S) mode. Pattern choice by CH1.
 CH4 = 000...049 Strobe off, 050...255 Strobe rate (050=slow / 255=max. speed 23 Hz)

Note: DMX functions cannot be activated via the optional IR remote, and the IR remote sensor is disabled if a unit is switched to “dP” mode.

Display on/off


The display of the unit will turn off after 25 seconds of not receiving any user commands through the user interface buttons. On the first hit of any button, the display will light up again; this first hit will not change any settings, only when you press any button after that, settings will be affected.

■ Maintenance

This device does not need regular maintenance. It is protected by an internal fuse located on the power supply PCB. If this fuse fails, this usually indicates an internal fault requiring servicing by a qualified engineer. The fuse shall only be replaced by a fuse of same specification, and the replacement has to be made by qualified personnel obeying applicable safety rules.

Infrared Remote Control (IRC)

As an optional accessory, this unit can be accompanied by an infrared (IR) remote control. Please note that all versions of this product are fitted with the required IR receiver, in this case the following functional description may not be applicable to your product; in other configurations, the IR receiver may be fitted but the remote control unit needs to be purchased separately and is not part of the delivery of this unit. You may contact your distributor/dealer for details.

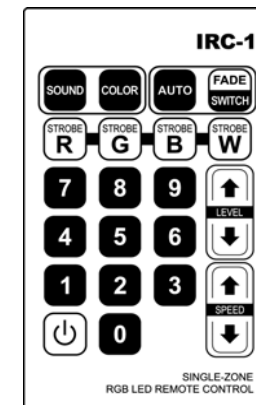

ON/OFF (Blackout) Key – the unit’s light output can be enabled/disabled with this key.

SOUND Key – the unit will work in sound-to-light mode. A pattern can be chosen with the number keys 0...9 and will relate to the patterns S0...S9 as available on the main unit itself. The dimming level can be varied with the relative UP/DOWN keys in ten steps.

COLOR Key – the unit will work in fixed color mode. A color can be chosen with the number keys 0...9 and will relate to the first 9 preset colors from the unit’s onboard C-Mode. The dimming level can be varied with the relative UP/DOWN keys in ten steps.

AUTO Key – the unit will work in AUTO mode, and a relative pattern can be chosen with the number keys. The number keys directly relate to the pattern numbers, but depend on whether FADE or SWITCH is active. If FADE is active, then the number keys 0...9 relate to patterns A0...A9, if SWITCH is active then the number keys on the remote control relate to patterns A10...A19. The pattern speed and the dimming level can be varied with the relative UP/DOWN keys in ten steps.

STROBE Keys – allow to activate white/red/green/blue strobe directly. Default speed is 16Hz. The dimming level can be varied with the relative UP/DOWN keys in ten steps.